



















Credit Card Sale	Manual Sale	Debit Sale
<ul style="list-style-type: none"> <li>▶ <b>Swipe or Insert Card</b></li> <li>▶ Or Press <b>Sale</b> Then <b>Swipe or Insert Card</b></li> <li>▶ Press <b>Credit</b></li> <li>▶ <b>Amount +</b> </li> <li>▶ If Customer Copy Set to Confirm: To Print Customer Copy, Press <b>Yes</b></li> </ul>	<ul style="list-style-type: none"> <li>▶ Press <b>Sale</b></li> <li>▶ <b>Account # +</b> </li> <li>▶ Press <b>Credit</b></li> <li>▶ <b>Exp Date +</b> </li> <li>- "CARD PRESENT" If Present, Press <b>Yes</b></li> <li>- "IMPRINT CARD" Imprint, Then Press </li> <li>▶ <b>Amount +</b> </li> <li>▶ <b>V-Code* +</b> </li> <li><small>If code is not known or not present (Xread), Press Enter to bypass then select the appropriate response.</small></li> <li>▶ <b>Zip Code +</b> </li> <li>▶ If Customer Copy Set to Confirm: To Print Customer Copy, Press <b>Yes</b></li> </ul>	<ul style="list-style-type: none"> <li>▶ <b>Swipe Card</b></li> <li>▶ Or Press <b>Sale</b> Then <b>Swipe or Insert Card</b></li> <li>▶ Press <b>Debit</b></li> <li>▶ <b>Amount +</b> </li> <li>- Enter Cash Back \$\$ + </li> <li>▶ <b>CUSTOMER:</b> Press <b>Enter</b> On PIN Pad to Confirm \$\$</li> <li>▶ <b>CUSTOMER:</b> <b>Key PIN # +</b> <b>Enter</b></li> <li>▶ If Customer Copy Set to Confirm: To Print Customer Copy, Press <b>Yes</b></li> </ul>
Credit Card Refund	Off-Line Sale	Void
<ul style="list-style-type: none"> <li>▶ Press  / <b>More</b> Until You Reach Option</li> <li>▶ Press <b>Refund</b></li> <li>- Password + </li> <li>▶ <b>Swipe or Insert Card</b></li> <li>▶ Press <b>Credit</b></li> <li>▶ <b>Amount +</b> </li> <li>▶ If Customer Copy Set to Confirm: To Print Customer Copy, Press <b>Yes</b></li> </ul>	<ul style="list-style-type: none"> <li>▶ Press  / <b>More</b> Until You Reach Option</li> <li>▶ Press <b>Off-Line</b></li> <li>▶ <b>Swipe or Insert Card</b></li> <li>▶ Press <b>Credit</b></li> <li>▶ <b>Amount +</b> </li> <li>▶ <b>Approval Code +</b> </li> <li>▶ If Customer Copy Set to Confirm: To Print Customer Copy, Press <b>Yes</b></li> </ul>	<ul style="list-style-type: none"> <li>▶ Press  / <b>More</b> Until You Reach Option</li> <li>▶ Press <b>Void</b></li> <li>- Password + </li> <li>▶ To Void Last Transaction Press <b>Yes</b></li> <li>▶ Or to Void Any Transaction Press <b>No</b></li> <li>▶ To Retrieve Any Transaction by Invoice # Press <b>Inv</b></li> <li>▶ Or to Retrieve by Account # Press <b>Acct</b></li> <li>▶ To Confirm Void Press <b>Yes</b></li> </ul>

**NOTE:**Enter **Password** When Prompted



- ▶ Terminal will prompt for clerk ID and invoice # if those options are activated.

\*NOTE: The V-Code is often requested for manually entered transactions. This code can be found on the back of the card as the last three digits on the right side of the signature panel, directly below the mag stripe

## Reprint

- ▶ Press **Reprint**
- ▶ To Print Last Transaction  
Press **Last Receipt**
- ▶ Or to Print Any Transaction in Batch  
Press **Any Receipt**
- ▶ Then Invoice + 

## Tip Adjustment

- ▶ Press **Tip**
- ▶ Select Search Method to Retrieve Ticket Then Press **Serv** **Amt** **Acct** **Inv**
- ▶ Follow Prompts After Above Selection  
Press 
- ▶ Press **Adj**
- ▶ Tip Amount + 




## Tabs

- ▶ Press **↓ / More** Until You Reach Option Then Press **Tab**
- ▶ **OPTIONS:**  
**Open Tab** **Close Tab** **Del Tab** **Tab Rpt**
- ▶ **Open Tab:** Follow prompts as if it were a regular sale. When tab amount displays, press enter to accept or key in new amount and press enter.
- ▶ **Close or Delete Tab:** Select Transaction By **Inv** **Acct**
- ▶ **Tab Reports:** Open Tab Report Prints When Option is Selected.


## Totals Report

- ▶ Press **Reports**
- Password + 
- ▶ To Print Totals by Card Type  
Press **Totals Report**






## Batch Review

- ▶ Press **↓ / More** Until You Reach Option Then Press **Batch Review**
- Password + 
- ▶ Select Search Method to Retrieve Ticket Then Press **Serv** **Amt** **Acct** **Inv**
- ▶ Enter Data as Requested Then Press 
- ▶ Transaction Displays Select Option Then Press **Adj** **Void** **Prev** **Next**
- ▶ **ADJUSTMENT OPTIONS:** Select Appropriate Edit Function Press **Amt** **Tip** **Serv** **Appv**
- ▶ Enter New Data as Requested Then Press 
- ▶ **VOID OPTION:** Voids the Transaction

## Detail Report

- ▶ Press **Reports**
- Password + 
- ▶ To Print Detail Summary  
Press **Detail Report**

## Balance/Settle

- ▶ Press **Settle**
- Password + 
- ▶ If Totals Option is Set to "Confirm" the Terminal Will Display Totals  
Press  to Confirm Totals
- ▶ Or: If Totals Option is Set to "Enter", You Must Manually Enter Totals  
**Sales Totals** + 
- ▶ **Refund Totals** + 
- ▶ **Grand Totals** + 

## - Manual Shift Change

- ▶ Press **1**
- ▶ To Increment Shift  
Press **Yes**

## - Add Servers

- ▶ Press **↓ / More** Until You Reach Option Then Press **Server Setup**
- Password +
- ▶ Press **Add Server**
- ▶ Enter a 1-4 Digit ID # + 
- ▶ Enter a Password + 

## NOTE:

Pressing the 3 key from the main menu on the Omni 3750 will advance the paper.

- **Optional Prompts**
- **For Multi Merchant:** Press Next until proper merchant # displays, then press Select, or enter merchant # and press enter.